

# RLS-2020 Software Update Tool User Guide

Ver.1.0.5

## Contents

1. Introduction.....	1
1.1. Compatible products .....	1
1.2. Software Requirements.....	1
2. How to use RLS-2020 Software Update Tool.....	2

## 1. Introduction

In this document, we will explain how to use “RLS-2020 Software Update Tool”. Using this software, you can update RLS-2020 software.

### 1.1. Compatible products

- RLS-2020 Version 1.0.0 or later.

### 1.2. Software Requirements

- .Net Framework 4.6.1 or later.
-

## 2. How to use RLS-2020 Software Update Tool


1. Start the RLS-2020 Software Update Tool.

< Caution >

Upgrading firmware should be used with great caution. Do not upgrade unless it is necessary to do so. Please make sure that RLS-2020S/I remains connected to a power source throughout the upgrade process.

Any damage caused by power failure during the upgrade will not be covered by the warranty.

The upgrade process will resets all settings, including IP address, to the factory default values.

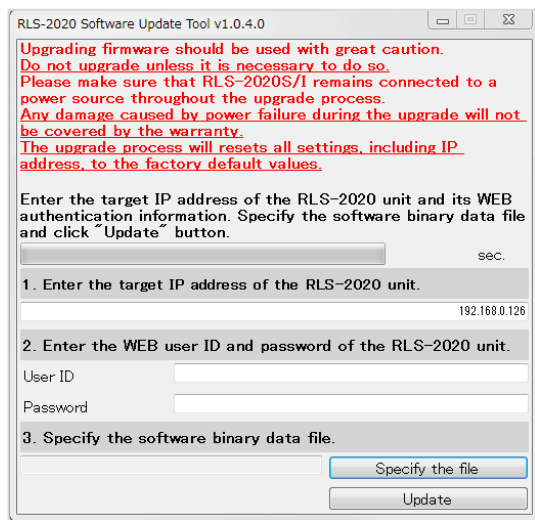

RLS-2020 Software Update Tool v1.0.4.0

Upgrading firmware should be used with great caution.  
Do not upgrade unless it is necessary to do so.  
Please make sure that RLS-2020S/I remains connected to a power source throughout the upgrade process.  
Any damage caused by power failure during the upgrade will not be covered by the warranty.  
The upgrade process will resets all settings, including IP address, to the factory default values.

Enter the target IP address of the RLS-2020 unit and its WEB authentication information. Specify the software binary data file and click "Update" button.

sec.

1. Enter the target IP address of the RLS-2020 unit.

192.168.0.126

2. Enter the WEB user ID and password of the RLS-2020 unit.

User ID

Password


3. Specify the software binary data file.

Specify the file

Update

- 1 Enter the target IP address of RLS-2020 unit.
- 2 Enter the WEB user ID and password of the RLS-2020 unit.
- 3 Click "Specify the file" button, and select binary data file.  
ex) rls2020flashall\_xxx\_yyyyyyyy.bin (xxx is version number)
- 4 Click "Update" button.
- 5 Shows count down, and waits about 420 sec.

### Result:

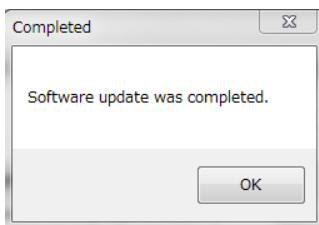

Completed

Software update was completed.

OK