




To comply with European standard "TS50131-2-11", the RLS-2020 series should be set following items with the setup software, REDSCAN Manager Advanced Ver. 8.2.2.0 or later.

1. Anti-Masking Sensitivity should be set as "High"



[Settings]->[Detection Mode] -> Show Advanced Settings-> Anti-Masking Sensitivity Value : Low (Default) -> **High**

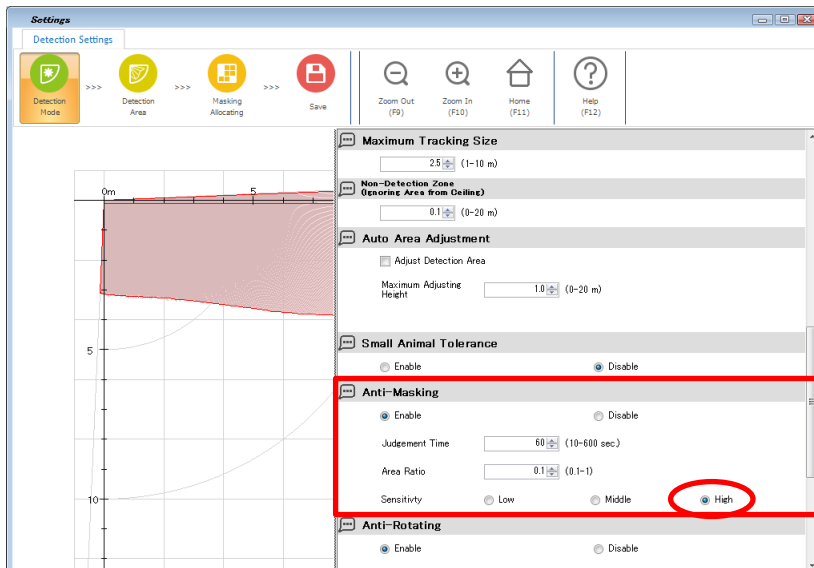

2. Alarm, trouble events and Anti-Masking signal should be generate as the following chart.



[I/O Settings]->Terminal -> Selection of Signal Output

Alarm outputs (A1, A2, B1 and B2) and Anti-masking (AM): Output 1
Anti-mask (AM), Trouble (TR): Output2
Tamper (TA): Output 3

- Anti-masking signal should be generated from both Output 1 and Output 2.
- Anti-rotation (AR), Soiling (SO), Disqualification (DQ) and Device Monitoring (DM) signal cannot be used under TS50131-2-11.

